

Brentwood

HAND MIXER



MODEL:HM-44
120V~60Hz 150W

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be observed, including the following:

- Read all instructions carefully. Keep this leaflet for future reference.
- To protect against risk of electrical shock, do not immerse unit in water or other liquid.
- Close supervision is necessary when used by or near children.
- Unplug cord from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts. Keep hands, hair, clothing & other utensils, away from beaters during operation to prevent injury and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, electrical or mechanical adjustment.
- The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Remove beaters from mixer before washing.
- Mixing flammable non-food substances may be hazardous.
- Do not use appliances for other than intended use.
- This appliance is for household use only.
- Do not abuse the cord. Never carry the mixer by the cord or yank it to disconnect an outlet; instead, grasp the plug and pull to disconnect.
- Any servicing, other than cleaning and user maintenance, should be performed by an authorized service representative.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS

POLARIZED PLUG (on some models)

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

How to Use

1. Before handling the Beaters, make sure the Mixer is unplugged from an electrical outlet and the Speed Control Switch is in the OFF position. Insert the Beaters by grasping the Mixer handle with one hand and the Beater Stem with the other hand. Insert the Beater Stem into the opening, rotating slightly until it locks into place. Repeat to attach the other Beater.
2. Plug the Cord into a standard electrical outlet.
3. Place the ingredients into a bowl, grip the Mixer handle, and position the Beaters in the center of the food to be mixed.
4. Select the speed setting that matches your mixing task.
5. Guide the Beaters continuously through the mixture for uniform mixing. Whenever you wish to scrape the sides and bottom of the bowl using a hand-held utensil, first move the Speed Control Switch to the OFF position. Then place the Mixer on the heel rest so that the Beaters can drain into the bowl.

How to clean

1. Be sure the Speed Control Switch is in the OFF position and the cord is unplugged before cleaning any part of the Mixer. Eject the Beaters/Whisks.
2. Wash the Beaters and Whisks in hot, sudsy water or in a dishwasher. Dry all parts thoroughly before storing.
3. Clean the Mixer or cord with a damp cloth. To remove stubborn spots, wipe surfaces with a sponge or cloth moistened with dish detergent and water. Follow with a clean, damp cloth. Do not use abrasive cleaners on any part of the Mixer as they can damage the finish.


Storing the Mixer

1. Avoid jerking the Power Cord or straining it at the plug connection. To store, coil the Cord in loops and secure it with the attached cord tie. Do not wrap the cord around the Mixer.
2. Store the Beater and Whisks in a drawer or in the original packaging.

Mixing Tips

1. For best results when beating egg whites, use a stainless steel, copper, or glass bowl; do not use an aluminum or plastic bowl.
2. For best results when whipping cream, chill the cream, Beaters, and bowl first. Start with the lowest setting and gradually increase as the cream begins to thicken.

NOTE: If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

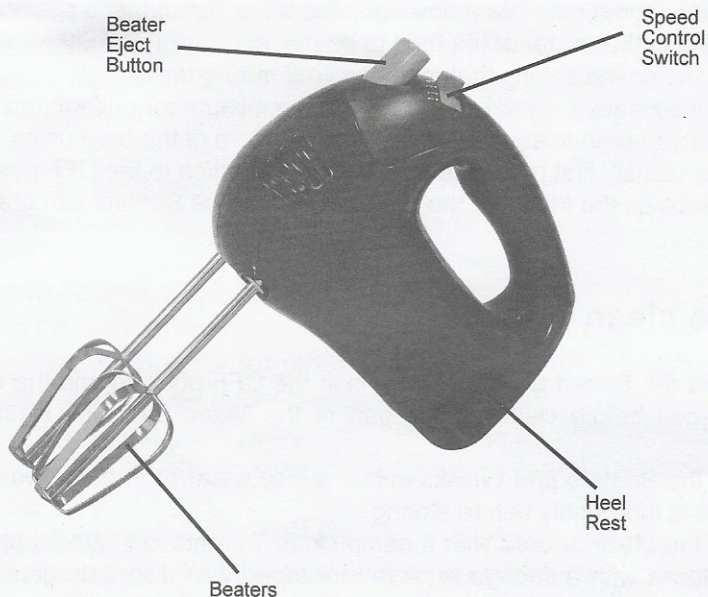

**THIS APPLIANCE IS FOR HOUSEHOLD
USE ONLY!**