


# T

## Televisions (Bedrooms)

Each bedroom is equipped with an LG television and Cable DTA box enabling you to view a wide range of channels in each room.

In the bedrooms only the Cable DTA remote exists which enables you to turn the TV on and off and change cable channels.

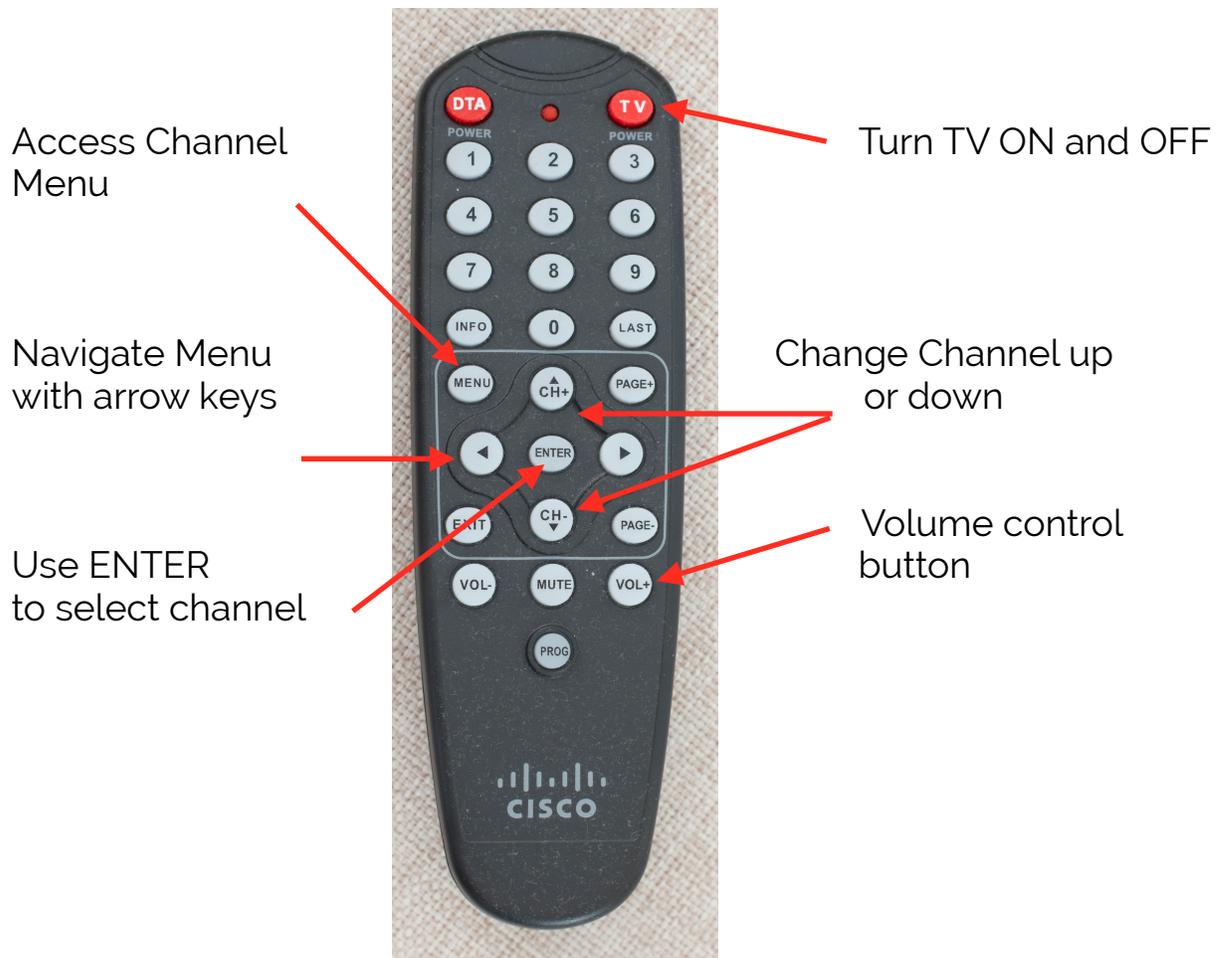


The Games Room is also equipped with 3 LG TV's which in addition to Cable TV channels also have Apple TV, Amazon Fire TV and Roku TV streamers. Apple TV closest to door, Amazon Fire TV in the middle and Roku TV closest to the Air Hockey table enabling you to stream Netflix and other video services as well as streaming music services such as Pandora.


Refer to Apple TV, Amazon Fire TV and Roku TV sections for further details.

Do note that all TV's in the games room operate off a single LG Remote. To control a single TV simply point the remote at close range to the sensor as shown below

To access Cable TV on the Games Room TV's they need to be set to HDMI 1.

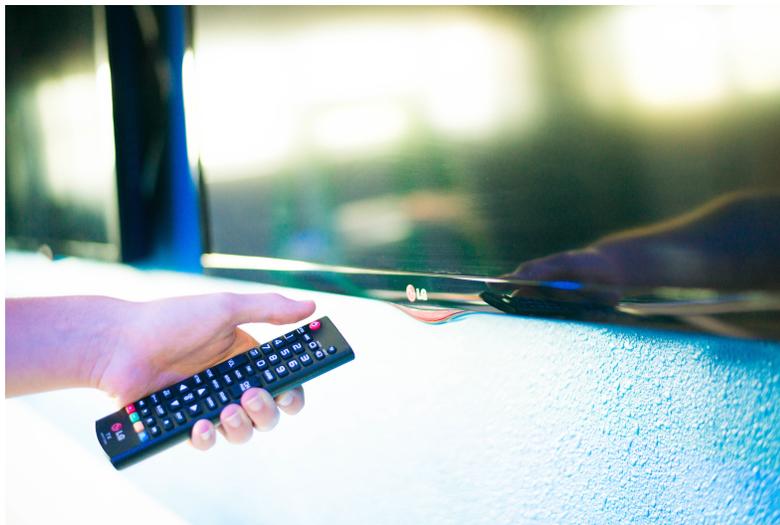

To do this simply press the INPUT button on the LG Remote then use the arrow keys to scroll left or right to select HDMI 1 then press the OK button.

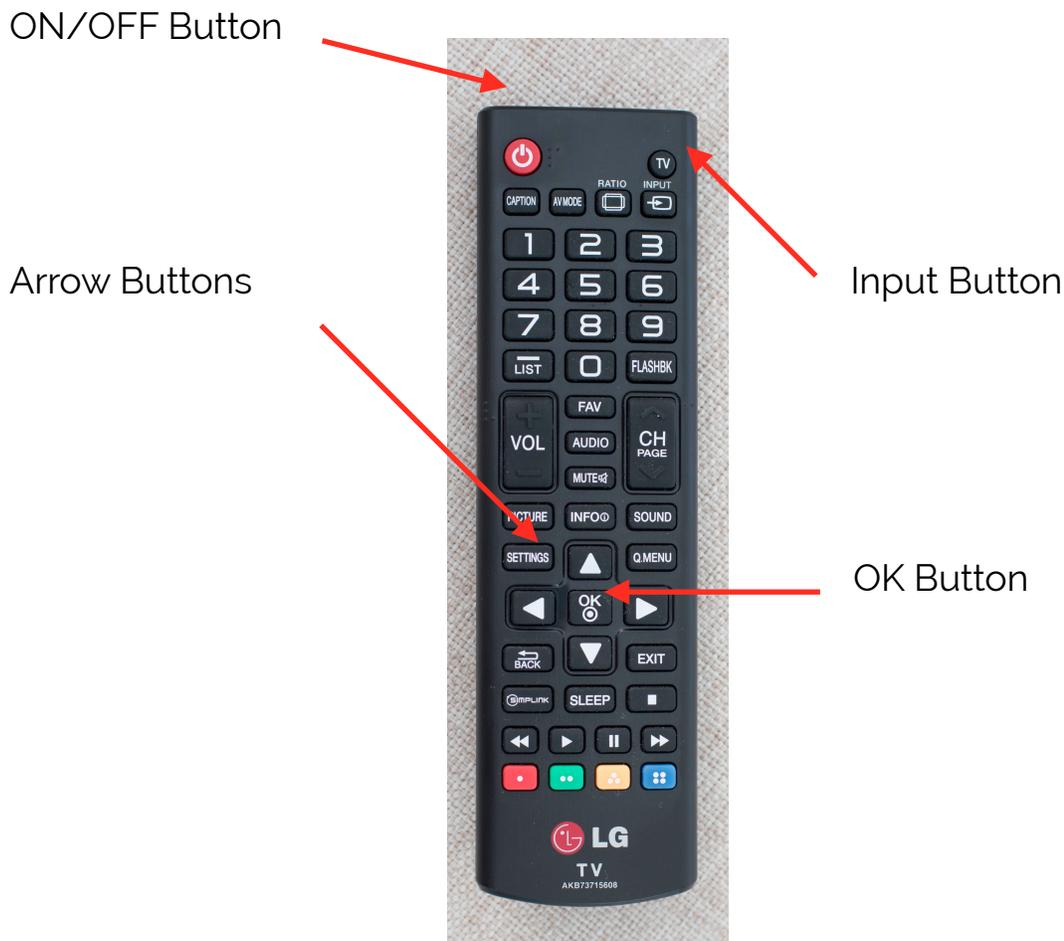


Once set to HDMI 1 the Cable DTA boxes work in the same way as the Remotes in each bedroom for selecting the menu and moving through the channels.

All streamers (Apple TV, Amazon Fire TV and Roku TV) are set to HDMI 2

Upstairs in the Den there is a Samsung 50in TV which also has a Cable DTA box attached as well as a Sony PS4 Games Console (Refer to PS4 section for more details). To view Cable channels the TV must be set to HDMI 1. PS4 is on HDMI 2.

Ensure the TV is turned on with the POWER button then press the SOURCE button and use the ARROW buttons to scroll up or down then press the ENTER button to select the HDMI source.

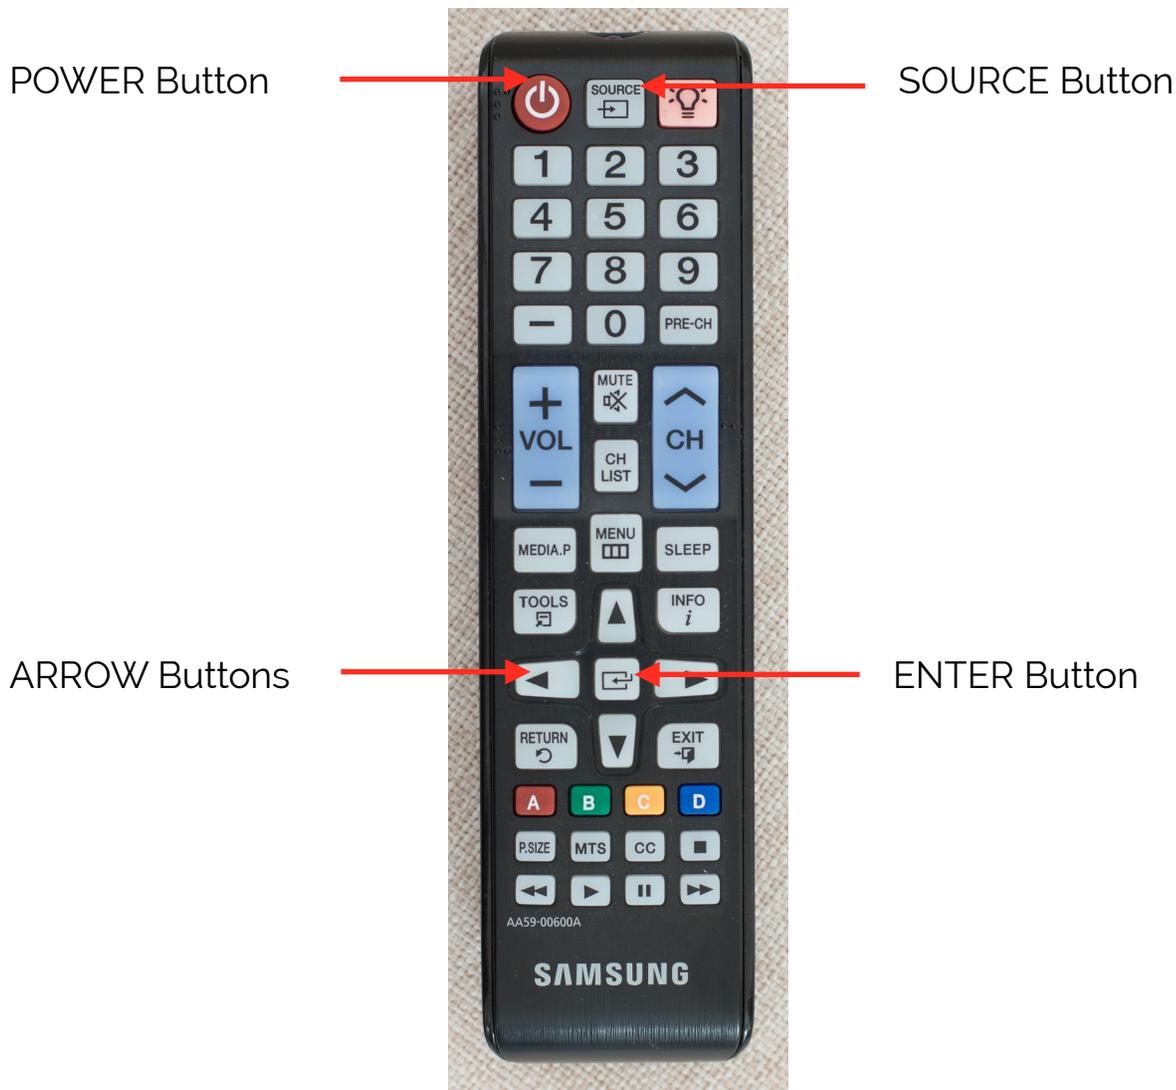


Once on HDMI 1 for Cable the Cable DTA remote operates in the same way as in bedrooms for selecting channels either via Menu or the UP / DOWN channel buttons.

Finally in the sitting room you will find a 60in SHARP TV equipped with Cable TV and NetFlix as well as a Samsung Blu-Ray player (Refer to Blu-Ray player section for more details). HDMI configuration on the TV is as follows:

- HDMI 1 - Cable TV
- HDMI 2 - Blu-Ray Player
- HDMI 3 - Spare HDMI Cable down the back of the TV unit which can be used to connect a laptop etc.

To view Cable TV ensure the TV is switched on via the POWER button and also ensure the Cable TV box is turned on (see below) then press the INPUT button and using the ARROW buttons move up or down to select HDMI 1 (Cable) then press the ENTER button.

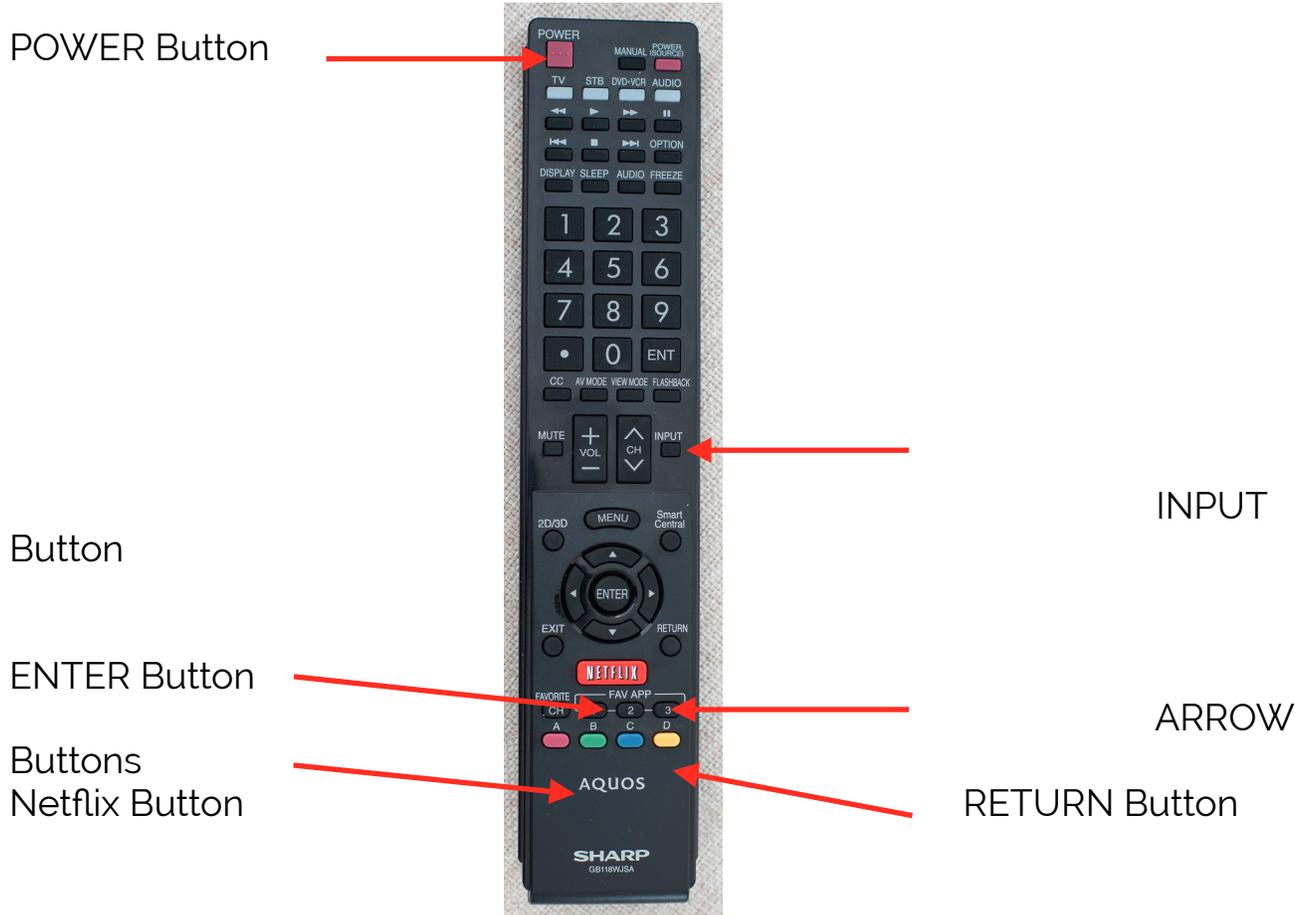


To turn ON the Cable TV box press the System ON/OFF button of the Cable TV remote as below. Cable TV box is switched on when there is a blue light emitting from the bottom of the box.

System ON/OFF Button




To navigate between channels either use the Channel Up/Down buttons or press the GUIDE button then use the ARROW buttons to navigate through the GUIDE then press OK/Select to go to the selected channel.


For NetFlix simply press the Netflix button on the TV (Sharp) remote. Occasionally Netflix tries to connect too quickly before the Internet connection is activated. If this happens just use the TV remote arrow keys to move to "Try Again" and press the ENTER button,

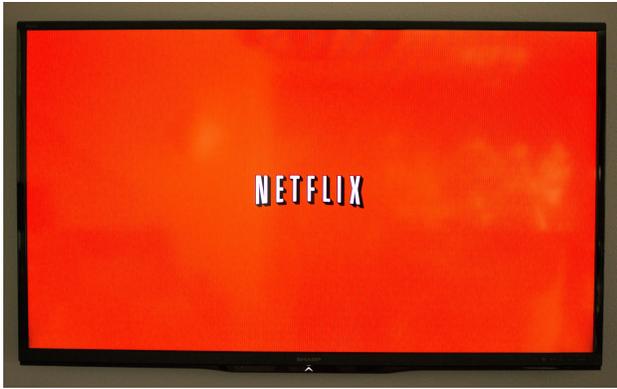

Once in Netflix you have several navigation options. Either use the ARROW buttons to scroll up and down and left and right through the recommendations then press ENTER button to start playing the selected item.

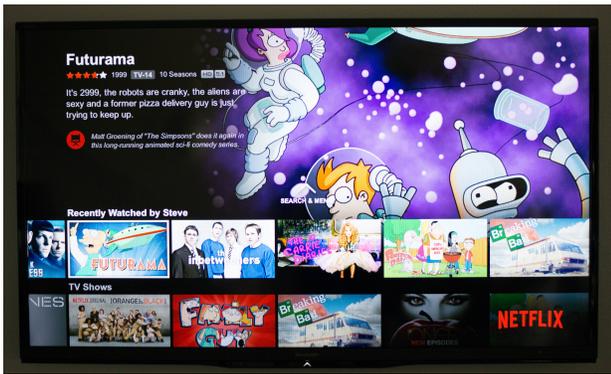

or from the screen above press the UP ARROW button to enable searching as below.

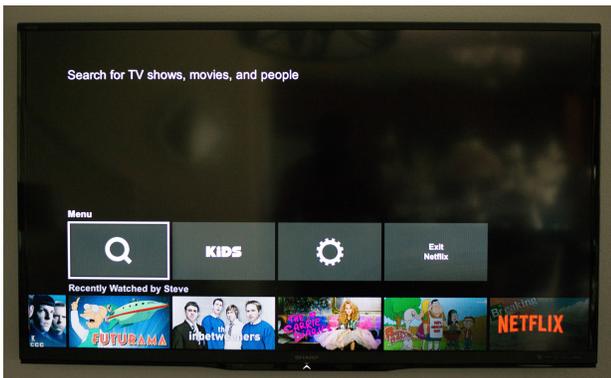

Select the magnifying glass as shown to the left and press the ENTER key

Use the ARROW and ENTER keys to select a search term, as you select characters options will appear as in the picture below.



Again use the ARROW buttons to navigate through the options then simply press ENTER button to view the options (episodes etc.) available for your selected title.



ARROW keys again to navigate through the options and then hit ENTER to start loading and playing your content.



To Pause or resume playing just press the ENTER button.

At any point you can return to the previous screen by pressing the RETURN button.