


Operating Instructions For

CLIKR™ -5

Cable Remote Control

URS5U-8780L & URS5U-8790L

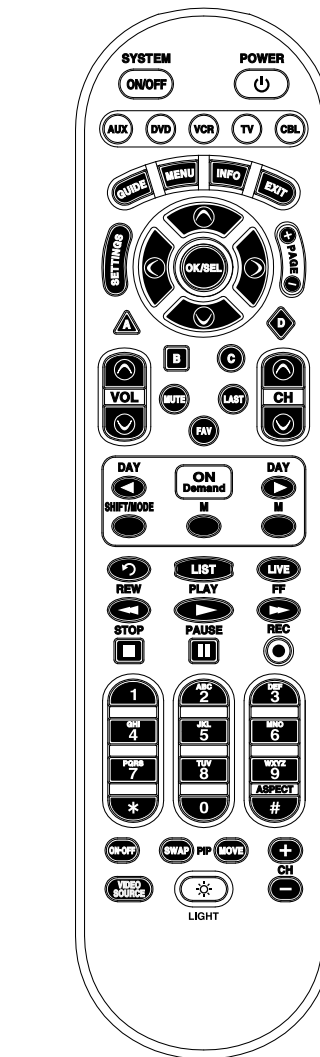

Universal Remote Control, Inc.

www.universremotec.com
OCE-0060K Rev 10 (02/01/13)

1 Introduction

The CLIKR™-5 URS5U-8780L & URS5U-8790L is designed to operate the CISC0 / SA, Pioneer, Pace Micro, Samsung and Motorola digital set tops. Plus the majority of TV, VCR, DVD and AUX equipment on the market as shown below.

CBL : Cable Set-top Box **TV** : Televisions
VCR : VCRs and TV/VCRs **DVD** : DVD Players
AUX : Audio Equipment, Media PC, etc.


2 Replacing Batteries

Before you program or operate the remote control, you must install two new AA alkaline batteries.

STEP1 Remove the battery compartment cover on the back of your remote control.

STEP2 Check battery polarity carefully, and install the batteries as shown in the illustration below.

STEP3 Replace the battery compartment cover.

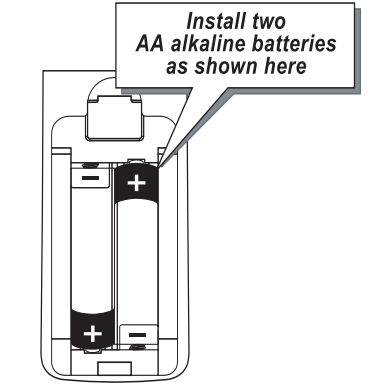

3 Operations


DEFAULT STATE:

Device Default: Cable Set-Top Box (STB)

Channel Default: CABLE channel and numbers through the CABLE STB. You have the option of controlling your CABLE channel and numbers through the TV or VCR. Refer to section I for programming steps.

Volume Default: Volume and Mute control are automatically transferred to the respective Component based on the Device selected:
CBL:TV ; TV:TV ; VCR:TV. DVD:TV ; AUX:AUX. You have the option of controlling CABLE Volume and Mute through the TV, VCR or AUX. Refer to section H for programming steps.

4 Button Functions

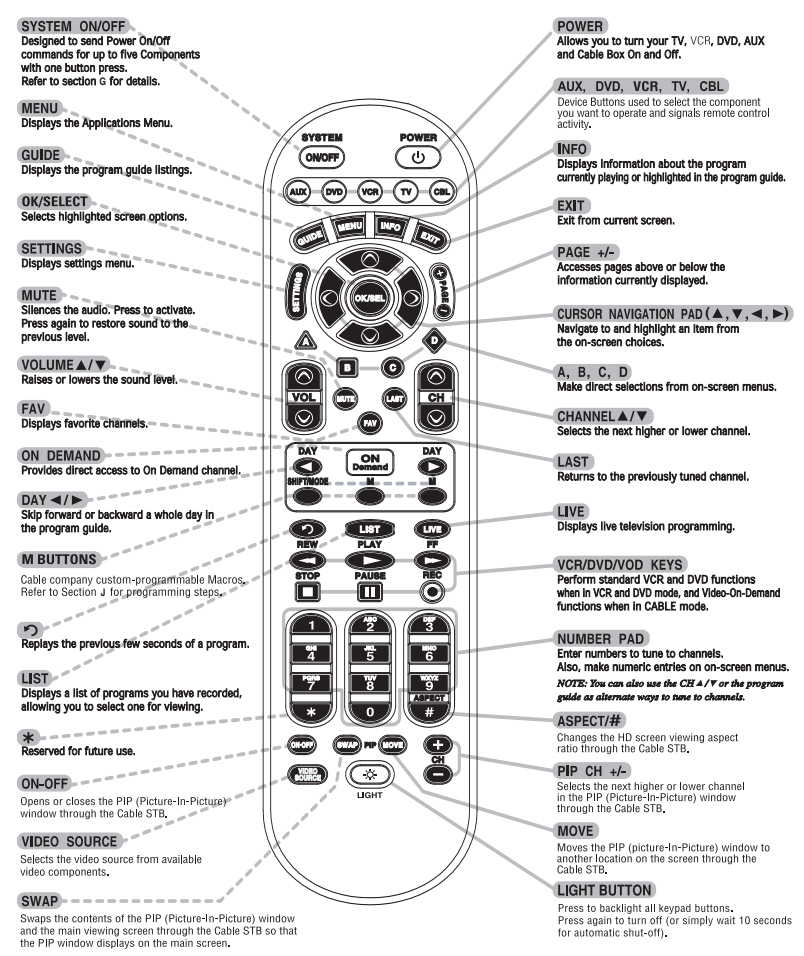

5 Programming the Remote Control

IMPORTANT SETUP NOTE!

In this section when you are instructed to press a [DEVICE] button, that means to press either the CBL, TV, VCR, DVD or AUX button, depending on what device you are programming the remote to operate.

There are three ways you can program your remote:

- * Quick Set-Up Method
- * The Pre-Programmed 3-Digit Code Method
- * The Auto-Search Method

The Quick Set-Up Method is a unique feature that enables the fastest and easiest setup by using a 1 digit code. This is the quickest way to set up devices made by popular manufacturers.

The Pre-Programmed Code Method allows you to setup all of the buttons at once by entering 3-digit code numbers that correspond with the components manufacturer/brand. Code tables for this method are on the backside of the operating instructions.

The Auto-Search Method scans through all of the codes in the remote control, one at a time allowing you to identify the correct code.

IMPORTANT SETUP NOTE!

This pertains to all programming steps. When you are in setup mode the device LED will light for 30 seconds. If you do not press a button within 30 seconds, the LED light will turn off and exit setup mode, and you will need to start over.

A. Quick Set-Up Method

STEP1 Turn on the component you want to program. To program your TV, turn on the TV.

STEP2 Point the remote control at the component.

STEP3 Press and hold the [DEVICE] key for 5 seconds until the Device LED will blink once and stays on. Continue to hold the [DEVICE] key and press the number key assigned to your brand in the Quick Set-up Code Table. The component should turn off as soon as the number key is pressed. (If it does not turn off, release the [DEVICE] key and use the Pre-Programmed 3-Digit code Method or Scanning Method.)

STEP4 Release the [DEVICE] key to save the code. The Device LED will blink twice to confirm that the code is stored.

Repeat the above steps for all other components (TV, VCR, DVD, etc.).

B. Quick Set-up Code Tables

TV

Quick Number	Manufacturer/Brand
0	SANYO
1	SONY
2	SAMSUNG
3	LG
4	TOSHIBA
5	PANASONIC
6	PHILIPS
7	HITACHI
8	SHARP
9	VIZIO

AUX

Quick Number	Manufacturer/Brand
0	BOSE
1	HP
2	APPLE / iPod
3	APPLE / iPod
4	MICROSOFT / XBOX
5	SONY / PS2
6	LUTRON
7	X-10
8	ZINWELL
9	MICROSOFT / XBOX

C. Pre-Programmed 3-Digit Code Method

STEP1 Turn on the equipment that you want the remote control to operate (Cable Box, TV, VCR, DVD, etc.).

STEP2 Press the [DEVICE] button and the [OK/SEL] button simultaneously for three seconds. The corresponding device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds. The next step must be entered while the LED is on.

STEP3 Point the remote control toward the equipment and enter the three-digit code number assigned to your brand from the code tables. If there are more than one three-digit number listed for your brand, try one code number at a time until your equipment turns off.

***Note :** You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above using the next three digit code number from the brand list.

VCR

Quick Number	Manufacturer/Brand
0	MITSUBISHI
1	HP
2	PHILIPS
3	JVC
4	SAMSUNG
5	PANASONIC
6	PHILIPS MAGNAVOX
7	TOSHIBA
8	PIONEER
9	LG

DVD

Quick Number	Manufacturer/Brand
0	HITACHI
1	SONY
2	PHILIPS
3	SAMSUNG
4	PHILIPS MAGNAVOX
5	PANASONIC
6	LG
7	JVC
8	DENON
9	PIONEER

D. Auto-Search Method

If none of the three digit code numbers assigned to your brand of equipment works, or the code table does not list your brand, you can use the Auto Search Method to find the correct

three-digit code number for your equipment by following steps:

STEP1 Turn on the equipment that you want the remote control to operate (Cable Box, TV, VCR, DVD, etc.).

STEP2 Press the [DEVICE] button and the [OK/SEL] button simultaneously for three seconds. The device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds. The next step must be entered while the LED is on.

STEP3 Press the [CH▲] or [CH▼] button one at a time or keep it pressed. The remote will emit a series of Power ON/OFF code signals. Release the [CH▲] or [CH▼] button as soon as the equipment turns off.

***Note :** You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above to continue the Auto Search Method.

STEP4 Press the same [DEVICE] button to store the code. The Device LED will blink twice to confirm that the code has been stored.

E. To Identify the 3-Digit Code Programmed for a Device

STEP1 Press the appropriate [DEVICE] button and the [OK/SEL] button simultaneously for three seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP2 Press the [INFO] button. The device LED will blink a number of times indicating the number of each digit for the code. Each digit is separated by a one second interval of the LED being off.

Example : One blink, (pause) three blinks, (pause) eight blinks indicates the code number 138.

***Note :** Ten blinks indicates the number 0.

F. Programming the AUX Device

You can take advantage of the AUX function to program a devices such as a media PC, gaming console or satellite radio receiver. Follow the instruction in section C to program an AUX device. You can also program the AUX button for a second TV, VCR or DVD player. To do this follow the instructions below.

STEP1 Turn on the 5th device you want to program (TV, VCR, DVD, etc.).

STEP2 Press the [AUX] button and the [OK/SEL] button simultaneously for 3 seconds. The [AUX] device LED will turn on for 30 seconds.

STEP3 Press the [Device] button for the type of device you want to setup. Point the remote control toward the device and enter the 3-digit code number assigned to your brand.

***Note :** To program a second TV press TV, etc.

STEP4 When the equipment turns off verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, enter the next 3-digit code number from the brand list.

STEP5 Once you have found the correct 3-digit code, save it by pressing the [AUX] button one more time. The [AUX] LED light will blink twice to confirm the code was stored.

G. Programming the System On/Off Button

This allows you to program the System On/Off button so it can send up to five power On/Off commands with one button press.

STEP1 Press the [CBL] button.
STEP2 Press the [SYSTEM ON/OFF] button and the [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.

STEP3 Press the first [DEVICE] button you want to store in the [SYSTEM ON/OFF] button and then press [POWER]. Repeat this for the other components you want to turn

on/off with the [SYSTEM ON/OFF] button.

STEP4 Press the [CH▲] button to save the power commands you stored. The [CBL] button will blink twice to confirm the commands have been saved.

H. Programming Volume Control

Volume and Mute control are factory programmed to automatically transfer to the respective Device mode You select, as follows:

CBL : TV **TV :** TV **VCR :** TV
DVD : TV **AUX :** AUX

If you wish to store the CBL volume control in CBL mode, use the following steps.

STEP1 Press the [OK/SEL] button and [CBL] button simultaneously for three seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP2 Press the [VOL▲] button. The device LED will blink.

STEP3 Press [CBL] button. The device LED will blink twice to confirm the programming.

***Note :** To return CBL device to TV volume repeat steps above replacing [CBL] with [TV] in Step 3.

I. Programming Channel Control

You can program the channel controls (Channel Up, Channel Down, Last and Numbers) from one Device to operate in another Device mode. Default channel control settings on the remote control are as follows:

CBL : CBL **TV :** CBL **VCR :** CBL
DVD : DVD **AUX :** AUX

If you wish to store the TV channel controls in TV mode, use the following steps.

STEP1 Press the [OK/SEL] button and [TV] button simultaneously for three seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP2 Press the [VOL▼] button. The device LED will blink.

STEP3 Press [TV] button. The device LED will blink twice to confirm the programming.

***Note :** To return TV device to CBL channel repeat steps above replacing [TV] with [CBL] in Step 3.

J. Programming a 'Macro' button.

If your remote model has custom-programmable Macro buttons available(See Section 4), they can be programmed to act as a 'Macro' or Favorite Channel button in CABLE mode. This allows you to program up to five 2-digit channels, four 3-digit channels or three 4-digit channels that can be accessed with one button press.

STEP1 Press the [CBL] button to select the CBL mode.

STEP2 Press the [MACRO] button and [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.

STEP3 Enter the 2, 3 or 4-digit code for the channel you want programmed first (for example, 007) using the Number Pad, then press the [STOP] button. Then enter the code for the next channel (for example, 050), then press the [STOP] button. Repeat this process for the third channel. The [CBL] button will blink once for each channel entered.

STEP4 Press the [CH▲] button to store the channels that were selected. The [CBL] button will blink twice to confirm the storage of commands.

To access the programmed channels, press the [MACRO] button once. This will bring up the first channel. Press once again and it will bring up the second channel. Press again and it will bring up the third channel.

K. Low Battery Warning

When the batteries are low and need to be replaced with fresh batteries, the Device LED lights will blink 2 times in sequence whenever a [POWER] button is pressed to turn on equipment.

L. Memory Lock System

This remote control is designed to retain programmed memory for 10 years even after batteries are removed from the remote control.

M. Record Your Component Set-up Codes

TV Set-up Code Number:

VCR Set-up Code Number:

DVD Set-up Code Number:

AUX Set-up Code Number:

For additional information about your remote control, go to www.universremotec.com

6 Set-up Code Tables

CBL-CABLE Converters

Manufacturer/Brand	Set-Up Code Number
MOTOROLA	002 111 148
PACE	001 005 002
PIONEER	001 103 034 051 063 076 105
SAMSUNG	001 030
SCIENTIFIC ATLANTA/CISCO	001 003 041 042 045 046

TV

Manufacturer/Brand	Set-Up Code Number
A MARK	112 143
ABEX	025
ACCURIAN	036
ADMIRAL	072 251 333
AD NOTAM	672
ADVENT	247 388
ADVENTURA	002
AFFINITY	680
AIRD	103
AKAI	116 146 248 404 405 473 475 323 387 391 615
ALBATRON	017
ALERON	028
AMERICA ACTION	043
AMPRO	073
AMSTRAD	052
ANAM	043 054 056 080 112
AOC	116 363 112 058 616
APEX	572
APEX DIGITAL	006
AQUAVISION	573 574
ASTAR	477
AUDIOVOX	076 454 388
AVENTURA	052
AVIELO	627 628
AVION	441
AXION	039
BELCOR	116
BELL&HOWELL	333 072
BENQ	423 600
BOLTLIGHT	266
BRADFORD	043
BROCKWOOD	116
BROKSONIC	238
BYDESIGN	031 032
CANDLE	116 002 003 363
CAPEHART	058
CARY AUDIO DESIGN	266
CELEBRITY	001
CENTURION	116
CETRONIC	043
CHANGHONG	247
CITIZEN	116 002 003 363 043 258 103 143
CLARION	043
CLASSIC	043
CLP CLASSIC	333
COBY	640 641 671
COLORTYME	116
CONCERTO	363
CONCIERGE	073
CONTEC	043 050 051
CORNEA	116
CORONADO	143
CRAIG	043 054
CROSLY	164
CROWN	043 143
CURTIS MATHES	116 258 363 143
CXC	043
CYBERHOME	015
DAEWOO	363 016 043 044 076 103 114 125 127 143
DAYTRON	363 143
DELL	320 164 363 618
DIGITAL PROJECTION	570
DIMENSIA	333
DREAMVISION	235
DUKANE	011 025
DUMONT	116 073
DURABRAND	096 052
EDWIN	257
DYNASTY	043
DYNEX	400
EKI	187
ELECTROBAND	001
ELECTROGRAPH	466
ELECTROHOME	143 024 076 196
ELEKTRA	072
ELEMENT	363 494 526 622
EMERSON	028 048 043 155 005 116 363 047 050 051 076 096
ENVISSION	116
EPSON	324 590
ESA	323
FFISHER	007 057
FUJITSU	246 198 410
FUNAI	028 043 052
FUSION	642
FUTURETECH	043
GATEWAY	242 268
GE	073 116 008 009 034 056 074 155 333 363
GEM	391
GIBRALTER	116 073
GO VIDEO	026
GOLDSTAR	113 116 102 363 106 112 127 143
GPX	674
GRUNPY	028 043
HAIER	363 501 623
HALL MARK	363
HANNSPREE	349 381
HARLEY DAVIDSON	028
HARVARD	043
HAVERMAY	081
HELLO KITTY	076
HIMITSU	043
HISENSE	419 442 619 630 631
HITACHI	011 166 009 010 012 023 075 143 158 072 363 250
HP	587 613 670
HUMAX	518
HYPERRION	609
HUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564 595
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
INTEQ	073
JADOO TV	673
JANIEL	002
JBL	164
JCB	001
JCPENNEY	024 116 008 009 030 065 258 143 333 363
JENSEN	013
JVC	038 034 001 083 199 210 533 581 639 406 668
KAWASHO	116 001
KEC	043
KENWOOD	116 001
KLEGG	466
KLOSS	002 059
KMC	143
KNOLL SYSTEMS	230 659
KONKA	457
KREISEN	530
KTV	043 116 143 154
KURAZAI	072
LG	363 113 116 102 106 112 127 143 569 284 648
LITEON	268
LODGENET	072
LOHNE	164
LOGIK	072

TV

Manufacturer/Brand	Set-Up Code Number
DREAMVISION	235
DUKANE	011 025
DUMONT	116 073
DURABRAND	096 052
EDWIN	257
DYNASTY	043
DYNEX	400
EKI	187
ELECTROBAND	001
ELECTROGRAPH	

TV

Manufacturer/Brand	Set-Up Code Number
LUXMAN	363
LXI	166 007 138 052 251 333 164
MAGNAVOX	164 059 116 003 060 061 363 127 022 333 094 226 390 467 431
MAJESTIC	333 072
MARANTZ	116 164 281 562 584
MATSUI	164
MATSUSHITA	080
MAVENT	242
MEGATRON	116 011
MEMOREX	007 072 363
MGA	116 363 024 028 042
MIDLAND	333 073
MINITEK	362
MINUTZ	008
MISAKI	052
MITSUBISHI	124 109 024 028 040 042 146 363 348 450 658
MONIVISION	017
MONTGOMERY WARD	333 072
MOTOROLA	081
MYC	116 363 258
MULTITECH	043
NAD	138 025
NEC	272 197134 116 040 016 024 056 019 262 236 281 575
NET TV	242
NEXUS	620 454
NIKEI	043
NIKKO	116
NIKO	527
NORCENT	390
NORWOOD MICRO	027
NTC	103
NUVISION	351 567
OLEVIA	432 363 333
ONKING	043
ONWA	043
OPTIMUS	025
OPTOMA	265 249
OPTONICA	019 251
ORION	096
PANASONIC	080 034 056 164 208 359 552 524 607 664
PHILCO	116 003 059 060 164 363 024 056
PHILIPS	164 005 093 038 116 003 363 059 127 206 431 333 161 594 629
PILOT	116
PIONEER	234 135 025 018 023 116 393 272 520 582 660
POLAROID	388 323 328 353 354 355 356 494 387 391 505 506 508
PORTLAND	363 143
PRINCETON	004
PRISM	034
PROSCAN	333
PROTON	363 112 058 143 171 172 033 528
PROTRON	392 398 498 499 500
PROVIEW	494
PROX	572
PULSAR	116 073
PLYLE HOME	661 662
QUASAR	034 056 606
RADIO SHACK	019 363 143 043 127
RCA	333 065 116 363 024 056 152 023 074 161 588 007 019 043 047
REALISTIC	466
REVOLUTION HD	466
RUNCO	182 073 395 416 072 342
SAMPO	116 058 363 242
SAMSUNG	258 050 089 105 363 127 143 333 228 229 515 655
SANSIUX	116
SANSEI	076
SANSUI	096 400 615
SANYO	166 007 020 053 057 082 187 511 266 657
SCPTRE	276
SCOTCH	116
SCOTT	028 043 048 143 363 497
SEARS	030 363 007 028 057 143 094 333 082 166 138
SELECO	205 011
SHARP	251 019 014 028 029 363 022 143 175 308
SHENG CHIA	081
SHERWOOD	349
SHOGUN	116
SIGNATURE	072

TV

Manufacturer/Brand	Set-Up Code Number
SIMPSON	003
SONY	001 608 646 651
SOUNDESIGN	028 363 003 043
SOVA	041
SOYO	528 033
SPECTRICON	363 494 526 622
SPECTRONIQ	499 500
SQUAREVIEW	052
SSS	363 043
STARLITE	043
SUNBRITE	633 634 635 386
SUNBRITE TV	605
SUPERSCAN	052 081
SUPRA	116
SUPRE MACY	002
SUPREME	001
SVA	328
SYLVANIA	116 003 052 059 060 164 044 333 127 514 593
SYMPHONIC	052
SYNTAX OLEVIA	432 363 333
TANDY	363 043
TATUNG	056
TECHNICS	034 080
TECHNOL ACE	028
TECHVIEW	045 557
TECHWOOD	363
TEKNIKA	002 003 363 024 028 043 072 258 143
TELEFUNKEN	037 046 615
TELERENT	072
TERA	172
THOMSON	049 055
TILEVISION	663
TKM	033
TNCI	073
TOSHIBA	138 030 007 040 258 325 230
TOTOVISION	143
TRUTECH	529
TVS	096
UNIVERSAL	008 009
VICTOR	038
VIDEO CONCEPTS	146
VIDIKRON	174 164 188 192 342
VIDTECH	363
VIEWSONIC	242 389
VIKING	002
VIORÉ	472 592
VISCO	526
VITO	363
VIZIO	386 387 624 625 675
WARDS	363 008 009 019 028 060 061 072 074 143 164 034
WAYCON	015
WESTINGHOUSE	076 276 435 001 280
WINBOOK	339
YAMAHA	116 363 370
YORK	363
YUPIITERU	043
ZENITH	363 073 072 095 103
ZONDA	112

TV-LCD & Plasma TVs

Manufacturer/Brand	Set-Up Code Number
ACCURIAN	036
AD NOTAM	672
ADVENT	247 388
AKAI	404 405 473 475 323 387 391 615
AOC	116 363 616
APEX	572
APEX DIGITAL	006
AQUAVISION	573 574
ASTAR	477
AUDIOVOX	454 388 076
AVION	441
AXION	039
BENO	600
CHANGHONG	247
COBY	641 671
CYBERHOME	015
DAEWOO	076 363

TV-LCD & Plasma TVs

Manufacturer/Brand	Set-Up Code Number
DELL	320 164 363
DURABRAND	052
DWIN	257
DYNEX	400
ELECTROGRAPH	466
ELEMENT	363 494 526 622
EMERSON	514 363 076 052
ESA	323
FUJITSU	246 198
FUNAI	052
FUSION	642
GATEWAY	242 268
GO VIDEO	026
HAIER	363 501 623
HANNSPREE	349 381
HISENSE	419 442 619 630 631
HITACHI	011 363 613 670
HP	378 316 327 421
HUMAX	518
HYPHERION	609
HYUNDAI	337 338
ILO	472
INFOCUS	547 470
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
JVC	038 210 581 639 668
KLEGG	466
KONKA	457
LG	363 569 113 116 284 648
LITEON	268
LOEWE	164
MAGNAVOX	164 363 226 390 467 431
MARANTZ	116 164 281
MAJESTIC	242
MINITEK	362
MITSUBISHI	124 363
NEC	272 262 575
NEXUS	620 454
NIKO	527
NORCENT	390
NORWOOD MICRO	027
NUVISION	351 567
OLEVIA	432 363 333
PANASONIC	080 164 208 522 524 664
PHILIPS	164 363 431 161 594 629
PIONEER	234 135 393 272 520 582 660
POLAROID	388 323 328 353 356 494 387 391 505 506
PRINCETON	004
PROTON	023 528
PROTRON	392 398 498 499 500
PROVIEW	494
PROX	572
PLYLE HOME	661 662
RCA	333 363 161 588
REVOLUTION HD	466
RUNCO	034 003 009 017
SAMPO	363 242
SANSUNG	258 228 229 515 655
SANSUI	096 400 615
SANYO	166 007
SCEPTRE	276
SHARP	251 363
SHERWOOD	349
SONY	001 608 651
SOVA	041
SOYO	528 033
SPECTRONIQ	499 500
SUNBRITE	633 634 635 386
SUNBRITE TV	605
SVA	328
SYLVANIA	052 164 333 514
SYMPHONIC	052
SYNTAX OLEVIA	432 363 333

TV-LCD & Plasma TVs

Manufacturer/Brand	Set-Up Code Number
TATUNG	056
TECHVIEW	045 557
TELEFUNKEN	615
TILEVISION	663
TOSHIBA	138 258 325
TRUTECH	529
VIEWSONIC	242 389
VIORÉ	472 592
VISCO	526
VITO	363
VIZIO	386 387 624 625 675
WESTINGHOUSE	076 276 435 001
WINBOOK	339
YAMAHA	116 363
ZENITH	363 073 072

TV-Projection TVs

Manufacturer/Brand	Set-Up Code Number
AKAI	404 405 473 475
DAEWOO	076
EPSON	324
HITACHI	011
HP	378
INFOCUS	333 548
JVC	038
LG	363
KONKA	457
MAGNAVOX	164 333
MITSUBISHI	109
OPTOMA	265
PANASONIC	080 524
MARANTZ	164 431
RCA	333
SAMSUNG	258
SANYO	166 007 187
SHARP	251
NEXUS	001
TOSHIBA	138
ZENITH	363 073 072

TV-Projectors

Manufacturer/Brand	Set-Up Code Number
AVIOLIO	427 628
BENO	423
BOXLIGHT	266
DELL	618
DIGITAL PROJECTION	570
DREAMVISION	235
EPSON	590
FUJITSU	410
HITACHI	250
INFOCUS	230 532 564 595
JVC	199 533 406
KNOLL SYSTEMS	230 659
MARANTZ	281 562 584
MITSUBISHI	348 658
NEC	236 281
OPTOMA	249
PANASONIC	359 607
RUNCO	342 182
SANYO	511 266 657
SELECO	205
SHARP	308
SIM2	205
SONY	646
TOSHIBA	230
VIDIKRON	342 174 188 192
YAMAHA	370

VCR

Manufacturer/Brand	Set-Up Code Number
ADMIRAL	025 053
ADVENTURA	034
AINO	117
AIWA	034 161
AKAI	016 146 043 124 125
AMERICA ACTION	117
AMERICAN HIGH	145
AMPRO	072
ANAM	145
ASHA	102
AUDIO DYNAMICS	012 039 043
AUDIOVOX	101
BEAUMARK	102
BROKSONIC	035 037 129
CALIX	101
QUASAR	145
CEC	024 117
CITIZEN	101 117
COLT	024
CRAGI	003 022 102
CURTIS MATHES	145
CYBERNEK	102
DAEWOO	111 116 117 005 010 108 110 120 112
DAYTRON	108
DBX	012 039 043
DYNATECH	034 053
ELECTROHOME	059
ELECTROPHONIC	101
EMERSON	006 029 035 017 025 034 036 037 101 129 131 153 162 116 145
FISHER	003 010 008 009
FUJI	145
FUNAI	034
GARRARD	034
GE	072 144 147 145
GO VIDEO	132 136 155 115 102
GOLDSTAR	101 114 013 012 123
GRADIENTE	034
HARLEY DAVIDSON	034
HARMAN KARDON	012
HARWOOD	024
HITACHI	026 150 034 043 160 013
HUGHES	817
HUMAX	817
HO	034
INSTANTREPLAY	145
JCL	145
JCPENNEY	012 013 015 101 102
JENSEN	043
JVC	048 043 130 150 012 145
KEC	101
KENWOOD	048 034
KLH	024
KODAK	101 145
LG	101 114 013 012 123
LLOYD	034
LOGIK	024
LXI	034 003 009 017
MAGIN	102
MAGNAVOX	067 034 164 145
MARANTZ	067 012 145
MARTA	101
MATSUSHITA	145
MEI	145
MEMOREX	101 003 010 034 053 072 102 139 145
MGA	059
MGN TECHNOLOGY	102
MINOLTA	013
MITSUBISHI	059 061 151 013 051
MOTOROLA	053 145
MYC	034 102
SHARP	024 034
SIM2	205
SONY	646
TOSHIBA	101
NOBLEX	102
NORDMENDE	043

VCR

Manufacturer/Brand	Set-Up Code Number
OLYMPUS	145
ADVENTURA	101
OPTONICA	053
ORION	025
PANASONIC	070 145 163 167
PENTAX	013 145
PHILCO	034 067 145
PHILIPS	067 034 101 071 145 817
PILOT	101
PIONEER	021 013 048
PORTLAND	108
PROFITRONIC	102
PROTEC	024
PULSAR	072
QUARTZ	002
RADIX	149
RANDEX	101
RCA	144 147 145 013 034 102
REALISTIC	003 008 010 034 053 101 145 102
RICO	058
RUNCO	148
SAMSUNG	102 113 115 120 144 147 125 112
SANSUI	053
SANYO	022 043 048
SANVO	003 010 102
SCOTT	017 037 120 129 131 112
SEARS	003 008 010 013 101 009 017 073 112
SHARP	053 165 145
SHINTOM	024
SHOGUN	102
SIGNATURE	034
SINGER	024
CENTRIOS	019
CINEVISION	091
CITIZEN	020
COBY	260
CYBERHOME	271
DAEWOO	132
DENON	080 173 138 329 358
DIAMOND VISION	037 038 039
DISNEY	040 096
DUNE	366
DURABRAND	091
DVD 2000	017
DYNEX	349
EMERSON	091 143
ENTERPRISE	074
ESA	022 143
FISHER	147
FUNAI	143
GATEWAY	222
GE	027
GO VIDEO	137 091 220 221 222
GOLDSTAR	091
GPX	044 045
GRADIENTE	021
GREENHILL	284 295 297
GRUNDIG	083
HARMAN KARDON	084 140
HITACHI	101
HITEKER	087
ILO	268
INITIAL	111
INSIGNIA	143 292 297 091 096 349
INTEGRA	142 180 280 273 338
JATON	046
JBL</	