


ST User's Manual

Nine Stars (Group) USA Inc.
17037 Green Dr. City of Industry, CA 91745
www.ninestarsusa.com

Introduction

Nine Stars automatic infrared sensor trashcans are designed and created to make life simpler. Our automatic infrared trashcan allows an effortless way to dispose of trash. Simply put an object or hand about ten (10) inches above the sensor and the lid will then automatically open within seconds. When the object or hand is no longer within the sensor's range the lid will automatically close in seconds. Our trashcan utilizes the infrared sensor technology to create a touch-less environment. We use the highest quality material and most up to date technology in our products to ensure excellence. We keep the sensor near the lip of the lid to make disposing trash easier because once the sensor detects the trash you simply dropping the trash in the trashcan once the lid opens.

Overview

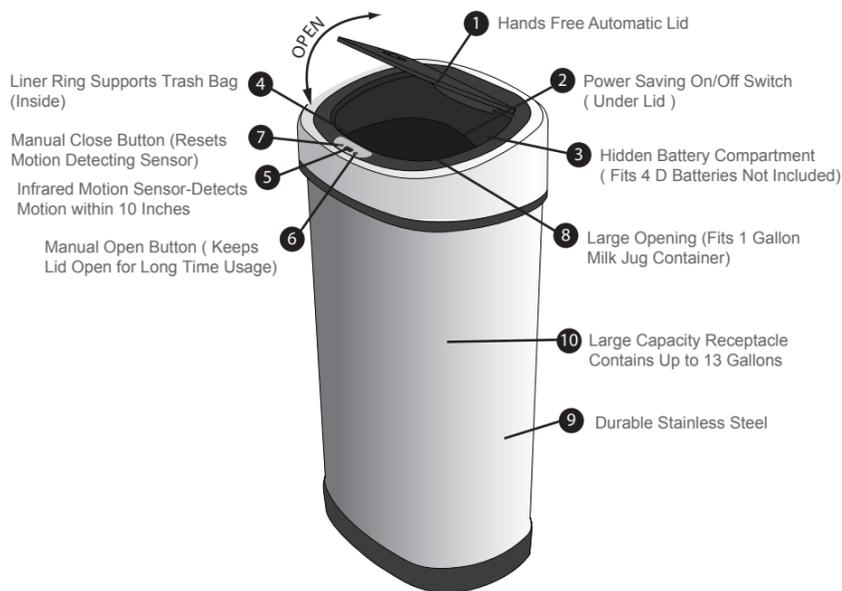


Model DZT-42-9 and 50-9

Instructions


Step 1 Take the trashcan out of box

The automatic opening and closing control system consists of computer chips, infrared detecting sensor, mechanical transmitting device and an electronic drive system. It is a high-tech product, combining machine, light, and electricity technique. It is made up of the lid (containing all mechanisms and computer chip) and pail. Its advantages are high performance, long service life and low energy consumption.

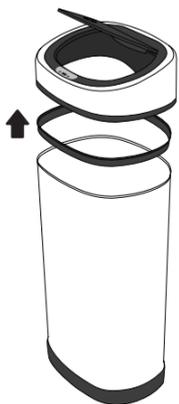

Step 2 Insert the battery


Take out the top cover from inside of the pail. Open the cover of the battery case at the bottom of the cover and equip it with four "D" size batteries. Line it according to the "positive and negative poles".

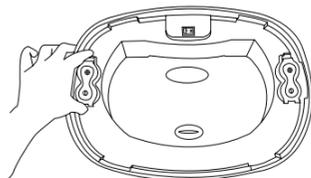

Squeeze battery cap in and carefully lift up to open. To close, insert side without clip first and push the battery cap down. Make sure it clicks to ensure that it's securely fastened.

Step 3 Insert the trash bag


Insert the garbage bag through the liner ring. Wrap the bag over and around the liner ring. Place it into the pail and gently push it down while adjusting.

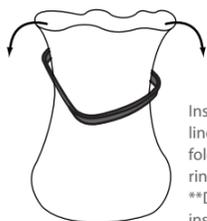

Insert bag through the liner ring hoop first, then fold bag edges over the ring.
DO NOT put liner ring inside the bag

Step 4 Assembling trash can


Hold the front side of the top cover and press down onto the top of pail. Place the rear side of the top cover on the pail first, then, press the front side down.

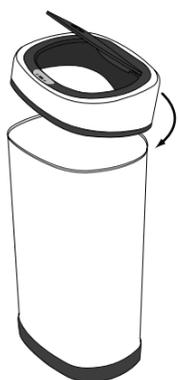

Place rear side down first

Step 5 Turn on the power

Turn on the power switch located inside of the trashcan. The red indicator light will light up. The indicator light will flash every three (3) seconds, to show that the electrical system is working properly.

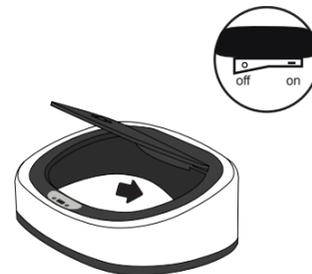

Step 6 Infrared motion sensor

When throwing objects into the trashcan, hold the object or hand STILL approximately ten (10) inches above the sensor. The lid will open automatically within 0.5 seconds, then will close automatically in 3-6 seconds after your hand or objects depart. If an object or hand does not depart the sensor area, the lid will stay open.




Special Features

Manual open and close button

The open button allows the lid to stay open until the close button is pushed. The close button closes the lid and resets it back to have it automatically open and close.

**Having the lid stay open manually for a long period of time will consume battery life.

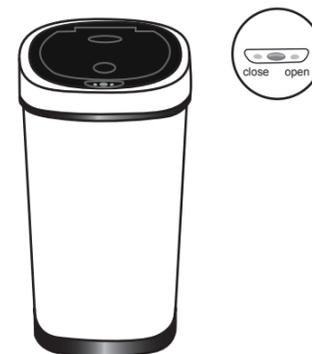

Technical Facts

- The indicator light flashes red on stand by mode.
- When the lid automatically opens, the indicator light shows green.
- When the lid automatically closes, the indicator light shows red.
- When the lid cannot fully open, the battery is low. Immediately replace with new batteries to avoid corroding of the battery case.
- When the indicator light flashes yellow, the batteries are low. Please change batteries. (Do not mix new and old batteries).

Warning

- Do not submerge the trashcan into water it is equipped with many electrical components. The trashcan can be wiped with a damp cloth.
- Avoid forcing the lid close by hand while it is opening. Forcing the lid down by hand can ruin the gears.
- Replace used batteries in a timely manner to prevent battery acid leakage. Battery acid may cause damage to the electrical components of the trashcan. Do not mix new and old batteries.
- Do not place trashcan in direct sunlight.

Limited Warranty

What does this Warranty cover?

- This warranty covers the electronic mechanism of the lid such as the computer chip, motor, gear box and electrical circuits.

How long does the coverage last?

- This warranty runs for one (1) year from the date of purchase.

What will Nine Stars Group do?

- Nine Stars will fix or replace any defective or malfunctioning electrical part of the lid.
- Customer is responsible for the cost of return shipment of the defective item.

What does this warranty not cover?

- Battery caps, liner rings, inner bucket, or any problems that is caused by abuse, misuse, or a natural disaster (such as earthquakes, floods, and fires) are not covered. Also, consequential and incidental damages are not recoverable under this warranty.
- Warranty does not cover attempts at repair or the use of unauthorized attachments.

How do you get service?

- In order to be eligible for service under this warranty PLEASE return the warranty registration card attached below with a proof of purchase (such as a photocopy of original sales receipt).
- If you have any technical questions or problems please feel free to call our office at:

o 1-866-9STARS-8, M-F, 9:00am to 5:30pm PST

How does state law apply?

- This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

The warranty card is a detached form. Please mail the completed form back to Nine Star Group USA.

Nine Stars (Group) USA Inc.
17037 Green Dr. City of Industry, CA 91745