

O

Oven

The kitchen is equipped with a large oven and 4 ring hob. Baking trays are in the drawer under the oven.

Front
Left
Hob

Rear
Left
Hob

Hob Controls

Rear
Right
Hob

Front
Right
Hob



Select Bake
or Broil

Start

Turn Off

Adjust Temperature

Timer
Controls

Oven Controls

To use the oven simply press the Bake or Broil button then adjust the temperature and press start. Note: Temperature is in Degrees Fahrenheit.