

W

Washing Machine

In the utility room you will find a top loading Washing Machine.

Simply load the clothes into the top of the machine along with your detergent. We recommend using Gel Tabs or Powder as placing liquid detergents in direct contact with the clothes can cause staining particularly on light coloured fabrics. We also recommend not to use fabric softener in the Washing Machine but instead use Dryer softener sheets for a better result.


Set the controls as required and pull the knob to start.

Load
Size

Temperature

Power
Rinse

Fabric

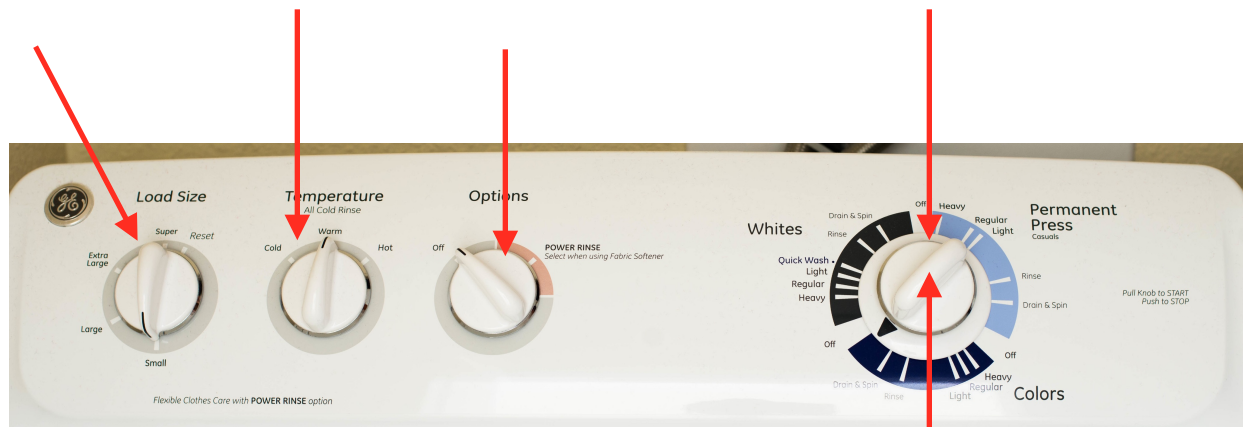

Pull this Knob out to start
Push in to Stop