D

Dishwasher

The kitchen is equipped with a dishwasher, please load the dishwasher with all used dishes prior to your check out.

To use the dishwasher simply pull the handle as below, load with dishes, insert a dishwasher tablet and press START. Cycle defaults to NORMAL which is adequate in most cases.

Cycle Selector

Do Not use Hi Temp or Sanitize on plastic dishes please

Start Button

Handle
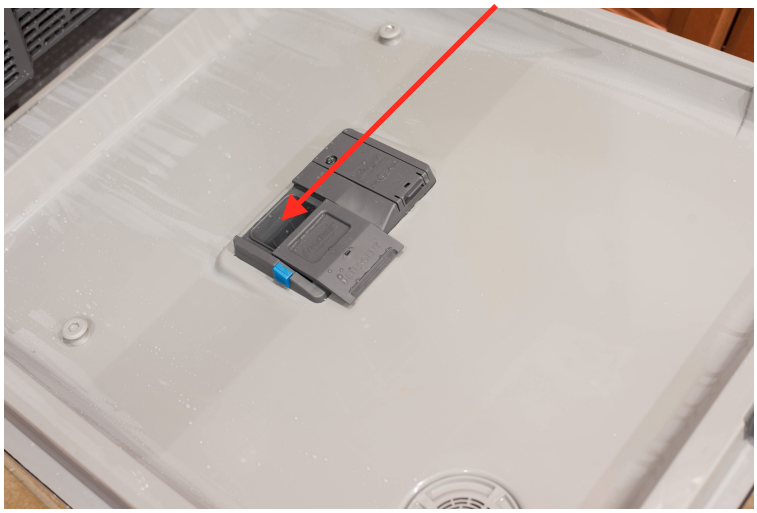
Place dishwasher tablet here (recommend to use Gel Tabs)